

## Universal Remote Control Operating Instructions

To turn system on:

Press "**main**"

Point remote control toward TV

Press and hold "on" for 2 seconds. System will now perform a series of macros that will turn on all of your components and allow you to watch cable or satellite. Notice that "cable" or "sat" appears at the top of your remote. When "cable" or "sat" is displayed at the top, the Universal Remote will act just as your original cable or satellite remote. Press "channel up/down", "guide", etc to watch cable or satellite.

To watch a DVD:

Press "**main**"

Press and hold "DVD" for 2 seconds. The remote will now perform a series of macros that will automatically switch your system to DVD mode. Notice that "DVD" appears at the top of the remote. When "DVD" is displayed at the top, the Universal Remote will act just as your original DVD remote. Press "play", "pause", etc to operate and watch your DVD.

To watch a VCR (if equipped):

Press "**main**"

Press and hold "VCR" for 2 seconds. The remote will now perform a series of macros that will automatically switch your system to VCR mode. Notice that "VCR" appears at the top of the remote. When "VCR" is displayed at the top, the Universal Remote will act just as your original VCR remote. Press "play", "pause", etc to operate and watch your VCR.

To listen to a CD (if equipped):

Press "**main**"

Press and hold "CD" for 2 seconds. The remote will now perform a series of macros that will automatically switch your system to CD mode. Notice that "CD" appears at the top of the remote. When "CD" is displayed at the top, the Universal Remote will act just as your original CD remote. Press "play", "pause", etc to operate and listen to your CD. **Turn off your TV if not watching.**

To watch cable or satellite:

Press "**main**"

Press and hold "cable" or "satellite" for 2 seconds. The remote will now perform a series of macros that will automatically switch your system to cable or satellite mode. Notice that "cable" or "sat" appears at the top of the remote. When "cable" or "sat" is displayed at the top, the Universal Remote will act just as your original cable or satellite remote. DVR functions are normally found in the LCD area of the Universal Remote on page 1 or 2.

To play any game system (if equipped):

Press "**main**"

Press and hold "game" for 2 seconds. The remote will now perform a series of macros that will automatically switch your system to game mode.

To turn the system off:

Press "**main**"

Point the remote toward the TV

Press and hold "off" for 2 seconds. The remote will now perform a series of macros that will automatically turn your system off.

To access a specific device or source:

Press "**main**"

Press the device or source key that applies (TV, cable, DVD, CD, etc)

Press any desired function button just as you would on the original remote control.

To listen to the radio:

Press "**main**"

Press "**TV**"

Press "**off**" while pointing toward the TV

Press "**main**"

Press "**audio**"

Press "**tuner**"

Press "**channel up or channel down**" to change stations

RF (radio frequency) signals are subject to interference from such things as microwaves and florescent lights. In the rare instance that your system encounters RF interference, the Universal Remote Control may intermittently miss commands to your A/V components. The most common problem is the power command for the cable or satellite box. If you turn the system on and nothing is displayed on the TV, wait until the remote displays "cable" or "sat" at the top of the remote. Then try and press "**on**" and this should correct the problem. If not, shut the system down and start over again.

Another way to correct any "sequence problems" is to shut **off** every component **manually** by pressing the power button on each device (cable box, DVD, CD, etc). Then follow the system "on" process over again.

To turn system on:

Press "**main**"

Point remote control toward TV

Press and hold "on" for 2 seconds.